



*RIVERBEND SANDLER POOLS*

# HOW TO WINTERIZE YOUR UV SYSTEM





**RIVERBEND SANDLER POOLS**

## HOW TO WINTERIZE YOUR UV SYSTEM

\*There are many variations of pool equipment based on the time the pool was built and the variety of pool products available in the marketplace. These instructions are for reference and Riverbend Sandler Pools is not responsible for any circumstances that result in product damage during the winterizing process or freeze damage.

1

### STEP 1

Turn off all power in the breaker box location at the pool equipment.

2

### STEP 2

Identify if pool equipment is above or below pool. If below, turn red or blue shut off valves.

3

### STEP 3

Locate UV sanitizer on equipment pad.

4

### STEP 4

CMP UV

Disconnect the plumbing connection union at bottom of UV- After, drain the line on bottom of UV .

5

### STEP 5

PARAMOUNT UV +  
A&A DLETA UV

Disconnect the plumbing connection union with a channel lock (20 inches or larger) at bottom of UV.

# STEP 1


Turn off all breakers at pool equipment.





# STEP 2


Identify if your pool equipment is below or above your pool's water level.

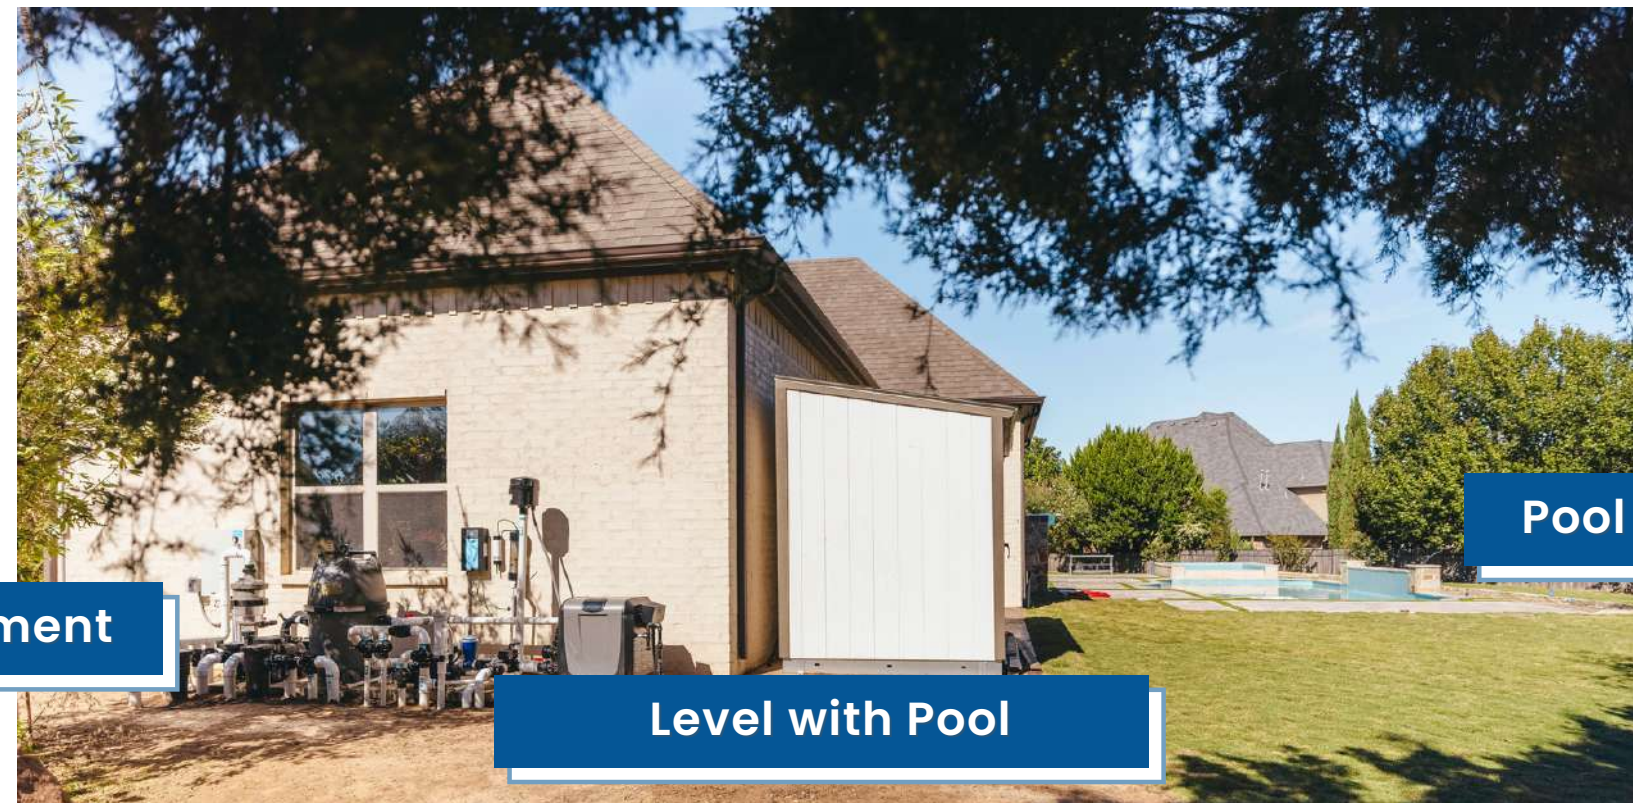



# STEP 2

If your pool equipment is below your pool's water level turn all **LARGE red ball valves** off before removing any drain plugs from your equipment.

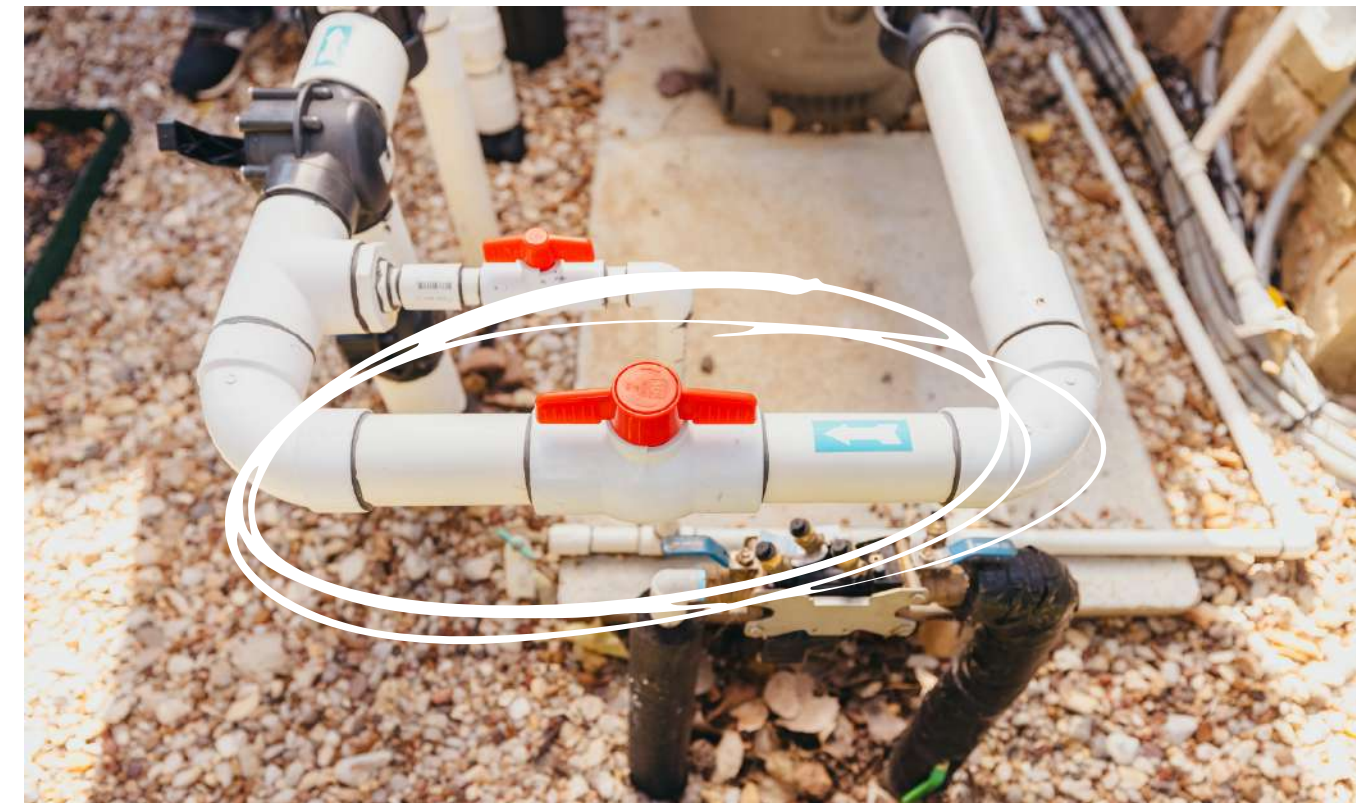

# STEP 3

Locate UV sanitizer on equipment pad- You may have one of the three below.





# STEP 4

If you have a CMP UV, disconnect the plumbing connection union at bottom of UV- after, drain the line on bottom of UV like the photo below.



# STEP 4

If you have a Paramount or A&A Delta UV disconnect plumbing connection union with a channel lock (20 inches or larger) at the bottom of the UV like the photo below.

Tool Needed:  
Channel Lock  
(20 inches or larger)







***RIVERBEND SANDLER POOLS***

**RIVERBENDSANDLER.COM**



WINTERIZING YOUR UV SYSTEM